

E-Z DESCALER

This product is a concentrated non-foaming cleaner that can be used for descaling dishwashers, glass washers, coffee machines, ice machines, water distillers and other appliances. It contains acid and non-foaming detergents and has no objectionable odour. It is an ideal product for descaling.

DIRECTIONS: Circulate or soak a solution of 1 part product to 4 parts of water for about 10 minutes. Drain and rinse. For major scale build up, use a stronger solution.

CAUTION: This is an acid. Do NOT mix with other chemicals. Avoid contact with aluminum.

FOR COMMERCIAL USE

